

AUTO SIDE MIRROR FOLDER


Summarize

Make sure that the rearview mirror of the car has motor, and it has a switch in the rearview mirror control panel through which can make the rearview mirror close and open. The auto rearview mirror folder can make this kind of rearview mirror close and open automatically.

Function

- 1 When the key of ignition switch is OFF, the side power mirror will fold automatically while locking the door.
- 2 When the key of ignition switch is OFF, the side power mirror will open out automatically while unlocking the door. (Optional).
- 3 When the key of ignition switch is ACC or ON, the side power mirror will open out automatically.

Define Cable

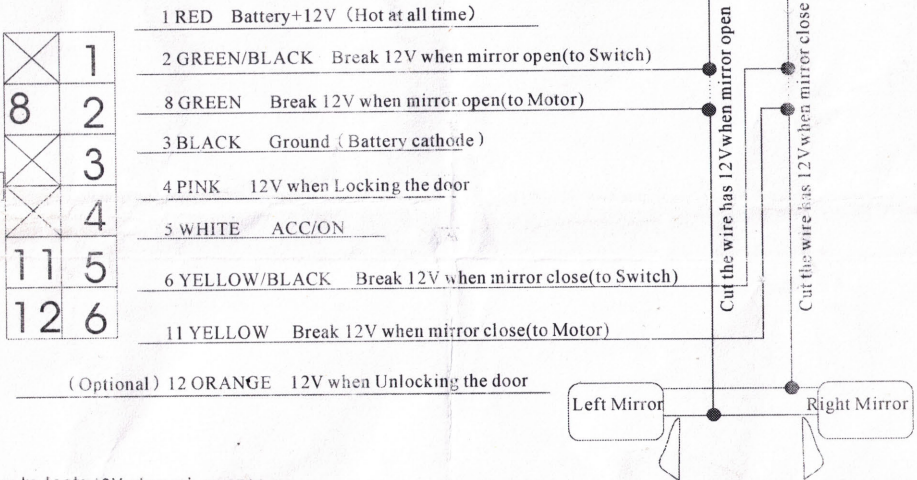

How to test: 12V when mirror open

Make the ignition switch to ON. The car test pencil one end is connected to GND, the other end is connected to the wire beside the mirror control panel, the lamp of the pencil will bright when the mirror is open, but will not bright when the mirror is folded. The lamp may bright for about 5 seconds after pressed the folded key for some car but may bright all the time until pressed the folded key again for other car.

How to test: 12V when mirror close

Make the ignition switch to ON. The car test pencil one end is connected to GND, the other end is connected to the wire beside the mirror control panel, the lamp of the pencil will bright when the mirror is folded, but will not bright when the mirror is open.

How to test: 12V when locking the door

Make the ignition switch to OFF. All doors must be close. The car test pencil one end is connected to GND, the other end is connected to the wire of the lock motor. Press the lock key of the remote controller, the lamp of the pencil will bright for about 0.5 second when the door is locking.

How to test: 12V when unlocking the door

Make the ignition switch to OFF. The car test pencil one end is connected to GND, the other end is connected to the wire of the lock motor. Press the lock key of the remote controller, the lamp of the pencil will bright for about 0.5 second when the door is unlocking.