

FAQ

1. If meet speed or signal strength problem:
 - (1) The distance between the extender and router is well situated, but the signal is still unstable. This may be a signal interference between extender and routers, such as washing machines, fridge, microwave ovens and so on, so it is recommended to adjust the location of these devices if conditions permit.
 - (2) The repeater is too far away from the router, If the distance between the wireless router and the repeater is too far, it will cause the wireless signal unstable, so please adjust the distance between them.
 - (3) Use your phone to find the ideal location for the Extender. If your phone's Wi-Fi signal (received from your router) is higher than 3 levels, it is the ideal spot to install the Extender. If not, we recommend you move it closer to your router for better Wi-Fi signal.
2. Why there is no internet connection after setting repeater mode? This is because you entered the wrong password. After selecting the host WiFi signal, you must enter the correct password of the host router.
3. Where should I put it when setting the repeater mode? Please place it between the home router and the no-signal area.
4. How to reset WiFi repeater? Press and hold the reset button with a needle for 8-10 seconds, then release.



 
User Manual

V2.1

1 Connection Repeater

After power the WiFi Repeater ,
Open the WiFi Setting on your smartphone or computer and select the
" WiFi-RePeater-XXXX " SSID. it will automatically jump to the setting interface.


For Phone

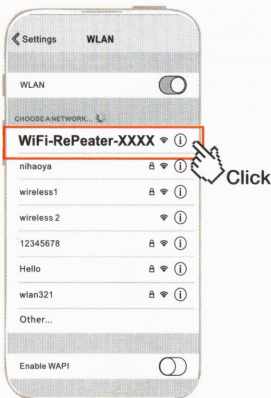

For MAC OS



 
For PC (Win10)

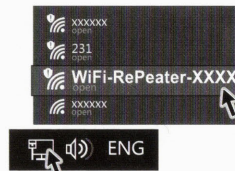

"XXXX" is the last 4 digits letters of MAC Address which appears at the back of each product.

2 Set Up Repeater

 
1 Select the SSID of your host router

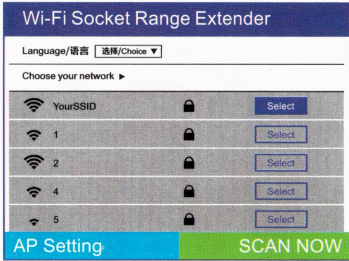

If you click connect on the phone, no jumping interface will appear. You can manually enter the URL
*** NOTE: 10.10.10.254**
 in the browser.



10.10.10.254

 2 Type the password of the host router, then click **Next**

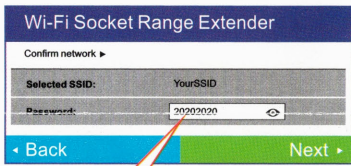


Input connection password

  3 You will see plus is added as suffix of the socket SSID. The default socket password is the same as the password of the router, or you can change it as you like. Click **Confirm** to go to next step.

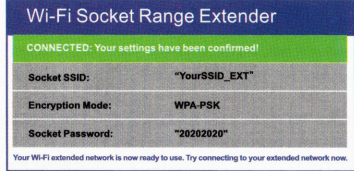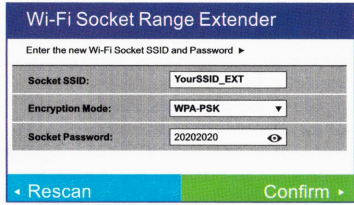

 
4 After approximately 30 seconds, if setting successfully, the LED Indication will light. Go back to the WiFi Settings on your phone or computer, select the new SSID you just set up to surf the internet.

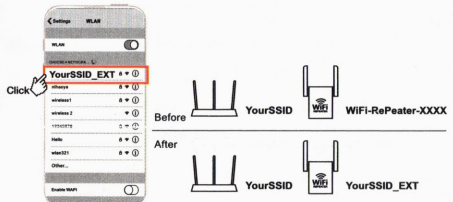

Reconnect the extender SSID, then get access to Internet

Remind: With the repeater powered on, Press or use a pin to Press **RESET** button till 8 seconds then release to get factory default setting.

 3 Set Up AP Mode




1 If you need **AP mode**, please do **RESET to Restore Factory**. then follow **STEP1** to connection repeater

2 Click **AP Setting**



 3 Please type the SSID and password, then Click **Confirm**

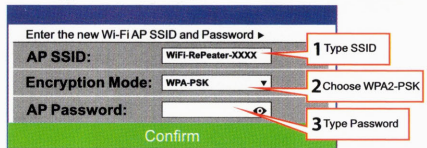

4 Plug the Ethernet cable to the LAN Port and select the new SSID you just set up to surf the internet.

