

Mi-Fi Temperature & Humidity Sensor



* Please read this manual carefully before use and keep it for future reference.

Product parameter

 
Size:	70*25*20mm
Input voltage:	DC3V LR03*2
Quiescent current:	≤ 6 uA
Low power undervoltage:	≤ 2.5V
WiFi:	802.11b/g/n 2.4GHz
Working temperature:	-10°C~ 55
Working Humidity:	10%~90%RH

1

How to set up:


1. First scan QR code with your smartphone, or search "Smart Life" app in Google Play Store or account Store to download and install app.

2. Register the account with email address.



2

Appearance introduction:

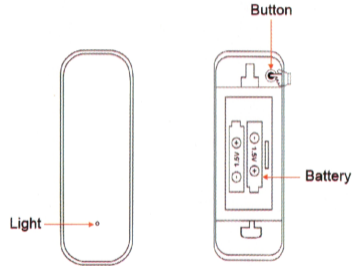

3

Bluetooth mode connection: First turn on the bluetooth in mobile phone → Open smart life app and choose "+" → Press and hold on the button for more than 5s until the light flash, Then will see "Discovering devices" on mobile app. Press "Add", enter the correct password, then press "Next". it will connect the Wi-Fi network automatically.



4

. After connect WiFi successfully, click the sensor icon to enter the app interface and do some setting. You can preset the value of temperature and humidity for alarming from here.



① ② : Temperature/humidity sensitivity: Sensor temperature/humidity value will synchronization to app when upper/lower preset temperature / humidity value. For example, now the temperature is 28°C and humidity is 70%, the temperature/humidity sensitivity is $\pm 0.6/6\%$, then the sensor temperature/humidity value will synchronization to app when temperature/humidity is 28.6°C or 27.4°C /76% or 64%. (Factory default: temperature sensitivity is 0.6°C, humidity sensitivity is 6%)

③ ④ : Temperature/humidity report cycle: Time setting of sensor temperature and humidity value synchronization to app. (Factory default is 120minutes)

⑤ ⑥ : Temperature/humidity upper and lower limits are set: The setting of the temperature / humidity range.

4. Intelligent Linkage

When the ambient environment change, you can do intelligent linkage. For example, the air conditioner will be on automatically when the room temperature surpass 35°C. And the humidifier will spray when the humidity is lower than 20% RH.



5. Share devices

You can share your added devices with your family members, so they can also monitor the ambient environment.

6. Screen on Sensor

You can do real-time monitor the temperature and humidity on the screen directly.

7. Temperature Unit Selection in APP

You can choose °C or °F as the temperature unit through app.

8. Third-party Voice Control

Works with amazon alexa, google assistant.